



# Motorola Droid Turbo Headphone Jack Replacement

Replace the headphone jack on your Droid Turbo.

Written By: Geoff Wacker



## INTRODUCTION

Use this guide to replace the headphone jack on your Droid Turbo.



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [iOpener](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Spudger](#) (1)



### PARTS:

- [Droid Turbo Headphone Jack](#) (1)

## Step 1 — Rear Case



- [Prepare an iOpener](#) and lay it over the rear case to soften the adhesive on securing the rear case to the phone.

## Step 2



- Use a plastic opening tool to pry the rear case off of the rest of the device.
  - Remove the rear case.
- i** The wireless charging coil may try to stick to the rear case, so make sure to remove it from the case before fully separating the rear case from the rest of the device.

## Step 3 — Midframe




- Remove the midframe bezel.

## Step 4




- Remove the four Torx T5 screws securing the midframe plate.

## Step 5

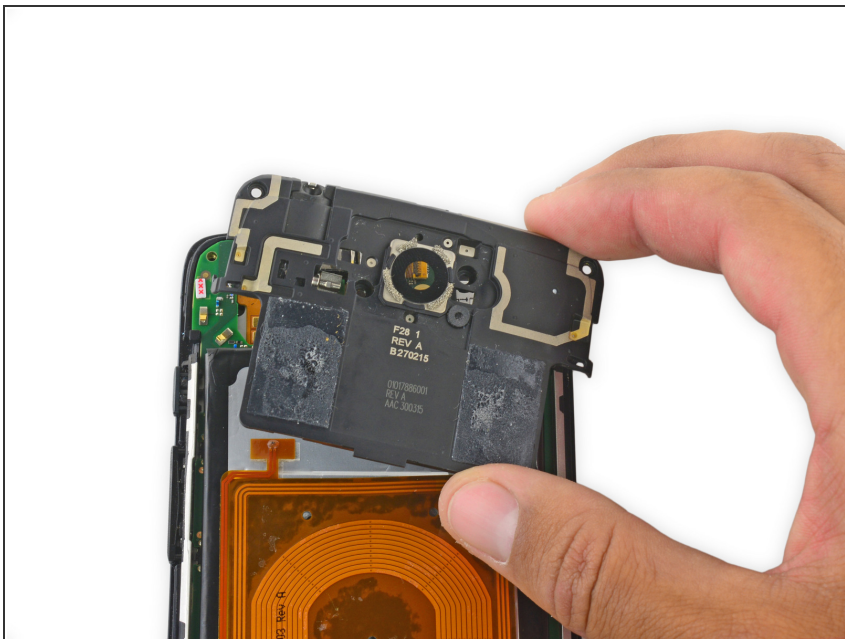

- Remove the midframe.

## Step 6 — Headphone Jack

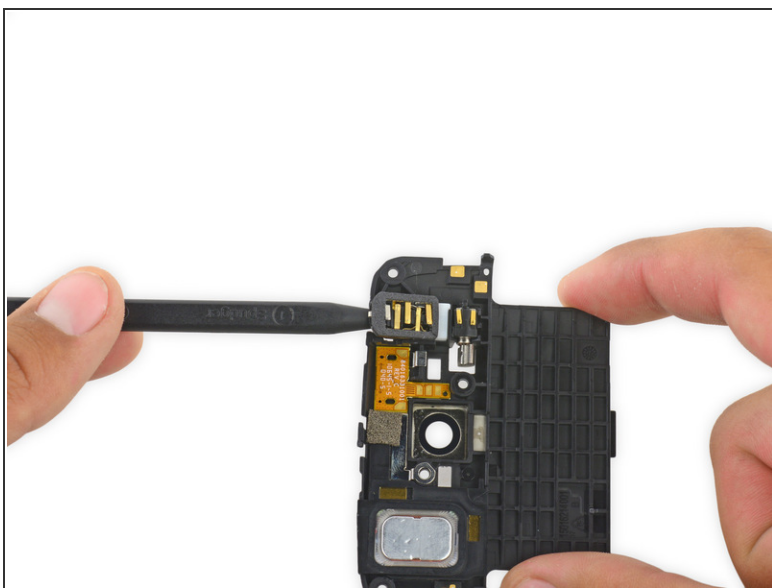

- Insert the pointed end of a spudger into the headphone jack, and gently pry the jack up and away from the midframe.

To reassemble your device, follow these instructions in reverse order.

